



Installing the SIM card and battery

1. Remove the battery cover and insert the SIM card.




2. Install the battery and reattach the battery cover.





1. Plug the supplied travel adapter into the phone and a power outlet.




4 Charging the battery






With the triangle facing up

2. When charging is finished, unplug the travel adapter.



Note: Do not remove the battery from the phone without unplugging the travel adapter first. Otherwise, the phone may be damaged.

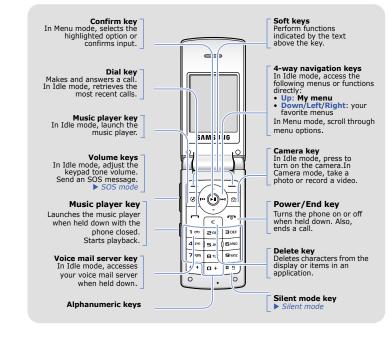


W Phone layout and key functions

Press and hold # in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

With the phone closed, press the Volume keys 4 times to send an SOS message to preset phone numbers. Once the SOS message is sent, the phone will change to SOS mode and will receive calls only from the registered recipients. Upon receiving a call from the SOS message recipients, the phone will automatically answer the call. Press of to exit SOS mode.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number



Your phone displays the following status indicators on the top of the screen:

Con	Description
₩.al	Signal strength

œ GPRS (2.5G) network

Connecting to GPRS (2.5G) network Transferring data in

GPRS (2.5G) network

Call in progress

Out of your service area or Offline mode Connected to secured

web page Connected with PC

ð Call diverting active **(3)** Roaming network

 \boxtimes New message 600 New voice mail

Icon Description

SOS message feature

68 Bluetooth active

Bluetooth hands-free car kit or headset connected

Alarm set 8

Œ. FM radio on

Silent mode (Vibration)

Silent mode (Mute)

Call ringer set to vibrate 船

9 Whisper mode, during a

Mute mode, during a call

(III) Battery power level

Switching on or off the phone

- 1. Press and hold for more than one second to switch on the phone.
- 2. Press and hold f for more than two seconds to switch off the phone.

Changing the display language

- 1. In Idle mode, press the Menu soft key.
- 2. Select Settings → Phone settings → Language.
- 3. Select a language.

Making a call

- 1. In Idle mode, enter an area code and phone number, and press .
- 2. Press for to end the call.

Answering a call

1. When the phone rings, press the **Accept** soft key or \(\backsightarrow \) to answer a

Press the **Reject** soft key or \(\sqrt{\operation} \) to reject the call

2. Press for to end the call.


2. Press Left or Right to select a call type.

3. Press **Up** or **Down** to scroll to the number you want.

Using the menus

In Idle mode, press the Menu soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key () or right soft key () to perform the function

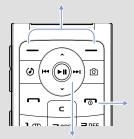

To exit the menu without changing the menu settings press this key.

Use the 4-way navigation keys as shortcuts to access your favorite menus

- 1. In Idle mode, press the Menu soft key.
- 2. Select Settings → Phone settings → Shortcuts.
- 3. Select a key.
- 4. Select a menu to be assigned to the key.

To select or modify a menu or feature:

- 1. In Idle mode, press the Menu soft key.
- 2. Press the Navigation keys to reach a desired menu and then press the **Select** soft key or (*II).
- 3. If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or (*II) to enter the submenu.

If the selected menu contains additional submenus, repeat this step.

- 4. Press the Navigation keys to find the setting of your choice.
- 5. Press the **Select** soft key or (*) to confirm your chosen setting.

Shortcut numbers

You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu

Menu map

1. Call log

- 1.1 Recent contacts
- 1.2 Missed calls 1.3 Dialled calls
- 1.4 Received calls
- 1.5 Delete all 1.6 Call manage
- 2. Phonebook 2.1 Contact list
- 2.2 Create contact
- 2.3 Group
- 2.4 Speed dial
- 2.5 My namecard
- 2.6 Own numbers 2.7 Management 2.8 Service number¹
- 3. Applications
- 3.1 Alarm
- 3.2 Music player
- 3.3 Voice recorder
- 3.4 FM radio 3.5 Java world
- 3.7 World clock 3.8 Calculator

- 3.9 Converter 3.10 Timer 3.11 Stopwatch 3.12 SIM AT¹
- 4. Browser
- 4.1 Home 4.2 Enter URL
- 4.3 Bookmarks 4.4 Clear cache
 - 5. Messages
 - 5.1 Create message
 - 5.2 My messages 5.3 Templates
 - 5.4 Delete all 5.5 Settings
 - 5.6 SOS messages 5.7 Memory status
 - 6. My files 6.1 Images
 - 6.2 Videos 6.3 Music
 - 6.4 Sounds

- 4.5 Browser settings
- 9.1 Time and date 9.2 Phone settings 9.3 Display settings 9.4 Sound settings

6.5 Other files

7. Calendar

8. Camera

9. Settings

6.6 Memory card²

6.7 Memory status

- 9.5 Light settings 9.6 Network services
- 9.7 Bluetooth 9.8 Security
- 9.9 Connection settings 9.10 Memory status 9.11 Reset settings
- 1 Available only if supported
- 2 Available only if a memory card is inserted.

Adjusting the volume

- 1. In Idle mode, press the Menu soft key.
- 2. Select Settings → Sound settings → Incoming call → Call alert volume.
- 3. Press Left or Right to adjust the volume level.
- 4. Press the Save soft key.

While a call is in progress, press the Volume keys to adjust the earpiece

Changing a ringtone for calls

- 1. In Idle mode, press the Menu soft key.
- 2. Select Settings → Sound settings → Incoming call → Ringtone.
- 3. Select a ringtone category → a ringtone and press the **Save** soft key.

W Redialing recent numbers

- 1. In Idle mode, press \square .

Entering text

Changing the text input mode

- Press and hold * to switch between T9 mode and ABC mode.
- Press * to change case or switch to Number mode.
- Press and hold # to switch to Symbol mode.

T9 mode

1. Press 2 to 9 to start entering a word. Press each key once for one

The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any

Example: To enter "Hello" in T9 mode, press 4, 3, 5, 5, and 6.

- 2. To display alternate word choices, press 0.
- 3. Press # to insert a space and enter the next word.

ABC mode

Press the keys labeled with the letter you want once for the first letter, twice for the second letter, and so on

For example, press 2 three times to enter "C" and 5 two times to enter

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the keys corresponding to the symbol you want and press the OK soft key. You can press the Navigation keys to scroll to a symbol set.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press C. To delete all of the characters, press and hold C.
- To insert a space between characters, press #.
- To enter punctuation marks in T9 mode or ABC mode, press 1 repeatedly.

Sending an SMS message

- 1. In Idle mode, press the Menu soft key.
- 2. Select Messages → Create message → Text message.
- Enter the message text.

Menu > Browser

Menu > Browser

Menu > Browser > Browser settings

Menu > Messages

> Create message

> Text message or

> Security

> Mobile tracker

Multimedia message

> Bookmarks

> Clear cache

- 4. Press the **Options** soft key and add items using the following options:
- Insert: add text templates, contacts, or bookmark items.
- Add image: add images.
- Add animation: add emotions or animations.
- Menu > Applications Set a period of time for the phone to count > Timer Menu > Applications Measure elapsed time. > Stopwatch Menu > Applications Use a variety of additional service offered by > SIM AT your service provider. Depending on your SIM card, this may available but labelled differently. Menu > Browser Connect your phone to the network and load the homepage of the wireless web service provider. > Home Menu > Browser Enter a URL address in order to quickly access > Enter URL web pages

accessing the wireless web.

web pages.

phones.

Save URL addresses in order to quickly access

Clear the cache, which is a temporary memory

site that stores recently accessed web pages. Select a connection profile to be used for

Create and send messages to other mobile

Description Menu > Settings Activate your phone password to protect your phone against unauthorized use. > Security > Phone lock Menu > Settings Change the phone password. > Security > Change password Menu > Settings Lock access to messages, files, or all menu > Security > Privacy functions on the phone, except for call functions. Menu > Settings Set the phone to work only with the current SIM > Security > SIM lock card by assigning a SIM lock password. Menu > Settings Set the phone to restrict calls to a limited set of > Security phone numbers, if supported by your SIM card. > Fixed dialling mode Menu > Settings Change your current PIN2, if supported by your > Security > Change PIN2 code Menu Track your phone when it is stolen or lost. When > Settings someone tries to use your phone with other SIM

card, the phone will automatically send the

friends. This feature may be unavailable due to

preset tracking message to your family or

certain features supported by your service

- Add melody: add sounds.
- Attach: attach a contact, calendar item, memo, or task.
- 5. Press the Options soft key and select Send only or Save and send.
- Enter a destination number.
- 7. Press (**) to send the message.

Taking a photo

- 1. In Idle mode, press []
- 2. Aim the lens at the subject and make any desired adjustments.
- 3. Press (FII) to take a photo.
- 4. Press the **Preview** soft key to take another photo, or press **C** to delete

Quick feature reference

This section provides brief explanations of features on your phone.

•	' ' '	
Menu	Description	
Menu > Call log > Recent contacts, Missed calls, Dialled calls, or Received calls	View the most recent calls you have missed, dialed, or received.	

	Menu	Description
	Menu > Messages > My messages	Access messages that you have received, sent, or failed in sending.
	Menu > Messages > Templates	Preset templates of frequently used messages.
	Menu > Messages > Delete all	Delete messages in each message folder, or all messages at once.
	Menu > Messages > Settings	Set options for using messaging services.
	Menu > Messages > SOS messages	Activate the SOS message feature. Enter recipients and select the repeat mode.
	Menu > Messages > Memory status	Check information about the memory currently in use. $ \\$
	Menu > My files > Images, Videos, Music, Sounds, or Other files	Access media files and other files stored in the phone's memory.
	Menu > My files > Memory card	Access the files stored on a memory card. This menu is only available when you insert a memory card into the phone.
	Menu > My files > Memory status	Check information about the memory currently in use.

Menu	Description
Menu > Settings > Connection settings	Create and customize the profiles containing the settings for connecting your phone to the network.
Menu > Settings > Memory status	Check information about the memory currently in use.
Menu > Settings > Reset settings	Reset the phone to the factory default settings.

Keep track of daily or monthly schedule.

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal

Drive safely at all times

Menu > Calendar

Do not use a hand-held phone while driving; park your vehicle first.

Switching off when refueling

Do not use the phone at a refueling point (service station) or near fuels or

Switching off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal

Switching off near all medical equipment

Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Menu	Description
Menu > Call log > Delete all	Delete the call logs in each call type, or all logs at once.
Menu > Call log > Call manager	View the duration of recent calls you have dialed and received, and the cost of your calls, if supported by your SIM card. Also, make a list of the phone numbers from which you want to reject calls.
Menu > Phonebook > Contact list	Search for contacts in Phonebook.
Menu > Phonebook > Create contact	Add a new contact to Phonebook.
Menu > Phonebook > Group	Create a group and select a ringtone and image for incoming calls from members of a group. Also, change the group name.
Menu > Phonebook > Speed dial	Assign speed dial numbers to your most frequently dialed numbers.
Menu > Phonebook > My namecard	Create a name card and send it to other people.
Menu > Phonebook > Own numbers	Check your phone numbers or assign a name to them.
Menu > Phonebook > Management	Copy or move all contacts on the SIM card to the phone's memory, and vice versa. You can also

check memory information for contacts.

Menu	Description
Menu > Camera	Take photos in various modes.
Menu > Settings > Time and date	Set the current time and date manually or set your local time zone.
Menu > Settings > Phone settings > Language	Select a language to be used for the display text.
Menu > Settings > Phone settings > Greeting message	Enter the greeting message to be displayed when the phone is switched on.
Menu > Settings > Phone settings > Shortcuts	Set the Navigation keys as shortcuts to access your favorite menus directly.
Menu > Settings > Phone settings > My menu	Set up a menu of your own using your favorite menu items, which can be easily accessed by pressing [Up] in Idle mode.
Menu > Settings > Phone settings > Volume key	Set whether the phone mutes the call ringer or rejects a call if you press and hold the Volume keys when a call comes in.
Menu > Settings > Phone settings > Extra settings	Set the automatic redialing feature or the answering method.

All wireless phones may be subject to interference, which could affect their performance

Special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on

Emergency calls

Key in the emergency number for your present location, then press \bigcirc . Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage your phone and may be dangerous.



Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions



At very high volume, prolonged listening to a headset can damage your hearing.

Menu	Description
Menu > Settings > Phone settings > Offline mode	Switch the phone to Offline mode. This mode is helpful when you want to use your phone in a place where you are not allowed to use mobile devices, such as in an airplane and at a hospital.
Menu > Settings > Display settings	Change the settings for the display.
Menu > Settings > Sound settings	Change the settings for the various sounds.
Menu > Settings > Light settings	Change the settings for the backlight and keypad light.
Menu > Settings > Network services	Access network services offered by your service provider.
Menu > Settings > Bluetooth	Connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.
Menu > Settings > Security > PIN check	Activate your PIN to protect your SIM card against unauthorized use.

Change the PIN

Access the list of service numbers assigned by

Listen to music. You can also make your own

Listen to music or news via the FM radio on vour

phone. First, you must connect your phone with

the headset, which serves as a radio antenna.

Make memos for things that are important and

Set your local time zone and find out the current

Do conversions such as length and temperature.

Set an alarm to sound at a specific time.

Record voice memos and listen to them.

Access the embedded Java games and

downloaded Java applications.

time in another part of the world.

Perform basic arithmetic functions.

your service provider.

music playlists.

manage them.

Oualified service

Menu > Settings

> Change PIN code

> Security

Menu > Phonebook

Menu > Applications

> Music player

> Voice recorder

> Applications

> FM radio

> Java world

> World clock

> Calculator Menu > Applications

> Converter

> Memo

> Service number

> Alarm

Menu

Only qualified service personnel may repair your phone.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg*. The highest SAR values for this model phone as reported to the FCC are GSM 850 Head: 0.91 W/kg, Body-worn: 0.65 W/kg, GSM 1900 Head: 1.04 W/ ka. Body-worn: 0.343 W/ka

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in